

INSTRUCTION MANUAL

2 DOORS NO FROST REFRIGERATOR

MODEL:

HRF-362TBG

HRF-386TBG

INDEX

CAUTION	2
INSTALLATION	6
OPERATION	7
CLEANING	9
TROUBLE SHOOTING	10

0060538093 (B)


Printed : 16 Jan. 2024

Haier

CAUTION

1. Do not insert the power plug for many products at the same time or do not share other product to the same power supply socket with refrigerator.
2. Set the power plug free from the back side of the refrigerator. Damaged power plug may cause fire due to overheating.
3. Be careful not to place the power cord underneath of the refrigerator or other heavy objects. Damage to the power cord could cause a short circuit and fire.
4. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. Do not place hot container high temperature or hot object on top of refrigerator.
6. Do not place the refrigerator close to inflammable or gas area, don't unplugged during gas leakage due to can cause sparking fire and explosion.
7. Do not place water container on the top of refrigerator.
8. Do not install the refrigerator in a moist or wet place.
9. Do not insert the power plug with a wet hand.
10. Do not try to service the refrigerator yourself, please contact service agent.
11. Be sure grounding connection to prevent electric shock.
12. Do not take out the power plug by pull out the power cord.
13. Long period power failure such as power fluctuate, should promptly unplug the power cord and leave at least 5 minutes before plugging in again. It will help prolong refrigerator and compressor life.
14. Frequently open door during the power failure should cause too fast losing cool.
15. If the door is not properly close it should cause high electrical consumption and food in refrigerator become spoil.
16. When cleaning the refrigerator do not splash water directly to the refrigerator. Follow the cleaning instructions described in this manual.
17. Do not use a soaked water cloth wipe the refrigerator due to water may drop into electrical parts and cause short circuit.
18. Do not use inflammable sprays near the refrigerator, because there is a danger of igniting.
19. Do not hang on or climbing the refrigerator which will cause it collapse.
20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.

21. Children should be supervised to ensure that they do not play with the appliance.
22. When not using refrigerator for long period, should disconnect the power plug, remove all the foods off from compartment, defrosting and clean interior and exterior parts then open the door until the unit dry and properly close the door.
23. This fridge using refrigerant R-600a and Cyclopentane insulation, unit should be kept away from heat or flame.
24. Do not store explosive substances such as aerosol can with flammable propellant in this appliance.
25. This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.

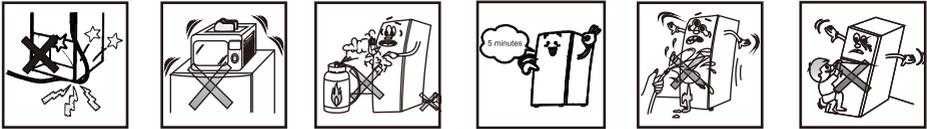

Be ensure this refrigerator is disposed of correctly, you will help prevent potential negative consequences of environment and human health, which could other wise be caused by inappropriate waste handling of this product. For more detail, please contact your local city office, your household waste disposal service.

- **WARNING :** *Ensure sufficient space in between a fridge and cabinet for ventilation purpose.*
- **WARNING :** *Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.*
- **WARNING :** *Do not damage the refrigerant circuit.*
- **WARNING :** *Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.*
- **WARNING:** *When positioning the appliance, ensure the supply cord is not trapped or damaged.*
- **WARNING:** *Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.*



Warning: Risk of fire/
flammable material

This symbol denotes the precautions on flammable refrigerators.

Correct disposal of the product




This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

For European only

- This appliance can be use by children aged from 8 years and above and persons with reduce physical, sensory or mental capabilities or lack of experience and knowledge if they have been give supervision or introduction concerning use of the appliance in safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and use maintenance shall not be children without supervision.
- Children aged from 3 to 8 years allowed to load and unload refrigerating appliances.

FEATURES

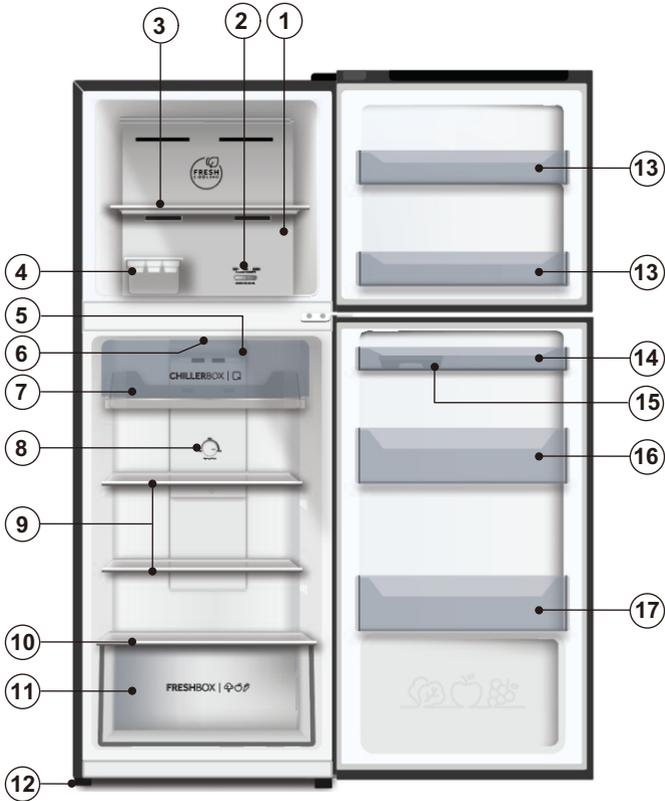


- | | |
|-------------------------------------|-----------------------|
| 1. Freezer Compartment | 10. Crisper Shelf |
| 2. Freezer Temperature Control | 11. Vegetable Crisper |
| 3. Freezer Shelf | 12. Adjustable Leg |
| 4. Ice Maker with Ice Cube Box Set | 13. Freezer Rack |
| 5. Deodorizer | 14. Egg Rack |
| 6. Refrigerator LED Lamp | 15. Egg Tray |
| 7. Chiller Room | 16. Utility Rack |
| 8. Refrigerator Temperature Control | 17. Bottle Rack |
| 9. Refrigerator Shelf | |

■ Suggestion






Relocation of refrigerator.

- Disconnect the power cord.
- Remove water from the evaporating tray.
- Take food out of the refrigerator compartments.
- Fasten the doors with tape while moving to prevent them from opening
- For safety, use 2 people to carry the refrigerator.
- Do not lift the unit in a horizontal angle, however, it may be 45 degrees tilted slightly.

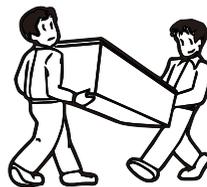

INSTALLATION

1. Select a place with strong, level floor. If the floor is not quite level, adjust the height of the screw accordingly.
2. Allow sufficient clearance between the refrigerator's back, also the side wall, so the door can open fully and to minimize noise.
3. Avoid direct sunlight and heat. Direct sunlight may affect the enamel coating. Heat sources nearby will cause higher electricity consumption.
4. Avoid very moist place. Too much moisture in the air will cause frost to form very quickly on the evaporator, and the refrigerator will have to be defrost very frequently.
5. Don't connect multiple appliances to one outlet. It may cause fire. To avoid the possibility of electrical shock, ground the refrigerator properly. The earth screw is located on the rear side of the refrigerator.
6. In case of customer desire to add the ground wire with Earth Screw junction earth symbol  at the back of the refrigerator. Should attach the ground wire to metal pipe or to cover screw of the wall receptacle or to a rod buried at least 2.4 meters in the ground.
7. After re-located, leave the fridge statically 3-6 hours before switching it on. This intend to ensure a proper cooling system operation.

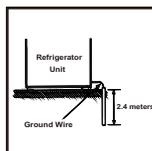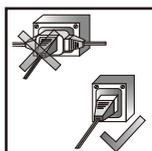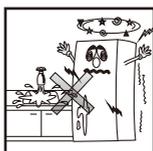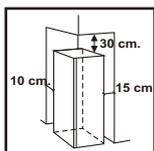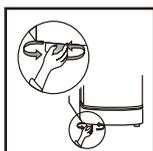

OPERATION

■ Make a test run

1. You may clean the refrigerator with a soft towel cloth before using for the first time
2. After cleaning, put back all the shelves at its original position.
3. Keep the door open and plug the power cord into its own electrical outlet. The interior lamp should lit.
4. Properly close the door.

SUGGESTION

● Temperature setting for the initial setup

For faster cooling in refrigerator compartment, should set temperature accordingly

Freezer Compartment : *Dial to position “MIN”*

Refrigerator Compartment : *Dial to position “MAX”*

Waiting the unit operates for 3 hours, then turn the freezer and refrigerator dial knob to middle position “MED” between “MIN” and “MAX”.

■ Temperature Control

The refrigerator is equipped with temperature control and cooling air circulation control the degree of cooling of the refrigerator and freezer compartment.


● Freezer Compartment

MIN : Minimum setting of temperature control in freezer compartment.

MED : Middle setting of temperature control in freezer compartment.

MAX : Maximum setting of temperature control in freezer compartment.

Freezer Compartment

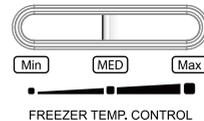


● Refrigerator Compartment

MIN : Low volume for fairly cold less in refrigerator compartment.

MED : Middle volume for the coldest in refrigerator compartment.



MAX : High volume for the coldest in refrigerator compartment.

Refrigerator Compartment

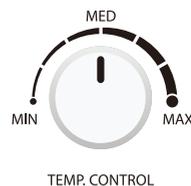

■ Making Ice Cubes

- Fill the ice cube tray 3/4-full with cold water and place it on the bottom of the freezer compartment. When the ice-cubes are ready they can easily be removed by simply twisting the both ends of the ice cube tray.
- Store the ice cubes in the Ice Cube Box. Do not store wet ice cubes or they will stick together.
- Do not use the “Ice Cube Box” as an ice making tray, or it will be damaged.

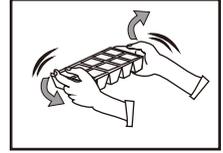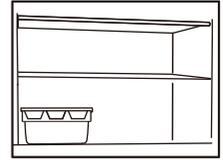

■ How to Defrost

This refrigerator will defrost automatically. No manual control is required. The defrosted water will drain into evaporation tray and evaporated by condenser heat radiation automatically.

■ Lamp Replacement

If the illuminating does not work properly. In case of the replacement LED is needed, it must be replaced by its service agent or similarly qualified person in order to avoid hazard.

■ Deodorizer

Inside the refrigerator compartment Deodorizer system Charcoal Filters is installed, thus keeping the air in refrigerator compartment fresh.

■ Food Storage

1. Refrigerated air goes down at the rear of the fresh food compartment and rises up at the front. Then, store the foodstuffs such as fish and meats which require quick refrigeration to the rear of the compartment.
2. Leave spaces among foods to help air circulation. Do not block the air vent to avoid frost occur and freezing capacity.
3. Foods which are easily dried should be well wrapped with waxed paper, aluminum foil or plastic wrap.
4. Wrap fish and smoked meats in moisture-vapor-proof material to prevent transfer of odors.
5. Pre-cool hot foods, wrap them with plastic wrap or put them in the airtight container.
6. Wipe the water on the surface of the bottles before storing them.



7. Be sure not to store bottles such as beer, cokes, etc. in the freezer compartment.
8. Do not put vegetables which are liable to freeze at the rear part of the shelves.
9. If planning to keep fresh fish and meats for a long period, wrap them in freezer paper and store in the freezer compartment.

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance
- Clean regularly surfaces that can come in contact with food and accessible drainage systems
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance

CLEANING

1. Before cleaning the refrigerator, you should always unplug it from the electrical outlet and remove all food.
2. Clean the refrigerator by wipe both exterior and interior parts with damp cloth.
3. Cleaning internal accessories using a damp cloth and dry it with a soft clean cloth.
4. Cleaning door gasket with damp cloth and dry it with a soft clean cloth.
5. Wipe the control knob with a soft clean cloth. Never wash it with water because this will cause an electric shock.
6. Never use brushes, acids, chemical thinner, gasoline or benzine for cleaning any part of the refrigerator.
7. To remove odors from your fridge, mix a lemon skin with warm water. Wipe thoroughly on odors surface with a cloth and dry with a soft clean cloth. Do not use cologne, air freshener or any other perfume.
8. Cleaning inside of the refrigerator and door gasket once a month. It is the best to clean the freezer compartment every time after defrosted.

TROUBLE SHOOTING

Before you call for service please check the table below. Your problems could be easily rectified. If you still need service, please contact the store where you purchased or the nearest service center.

When	Check if ...
Not operating ...	<ul style="list-style-type: none"> ● Power supply cord is unplugged. ● Temperature control setup to position “ MIN”. ● If home fuse blown or circuit breaker off ?
Warmer than usual ...	<ul style="list-style-type: none"> ● Too frequent or too long door openings. ● Check the temperature control dial setting. ● Large amounts of food placed in refrigerator. ● You put warm food in the refrigerator.
Unusual sounds ...	<ul style="list-style-type: none"> ● The floor is weak or uneven. ● Make sure the back of the refrigerator does not touch the wall.
Motor operates for long periods ...	<ul style="list-style-type: none"> ● Normal when refrigerator is first delivered to your home - usually requires 24 hours to completely cool down. ● Large amounts of food placed in refrigerator to be cooled or frozen. ● Hot weather - frequent door openings. Door left open. ● Temperature control is set too cold.
Moisture collects inside ...	<ul style="list-style-type: none"> ● Too frequent or too long door openings. ● In humid weather, air carries moisture into refrigerator when door is opened. ● You put warm food in the refrigerator.

Note : Normal working unit, the back and side cabinet should be warm.

